


IRG161 THERMOMETER OPERATING INSTRUCTIONS

For Model with thermocouple socket

The thermometer is a non-contact infrared thermometer. There are many mathematical modes for the infrared function. Please don't use it for safety-related applications.

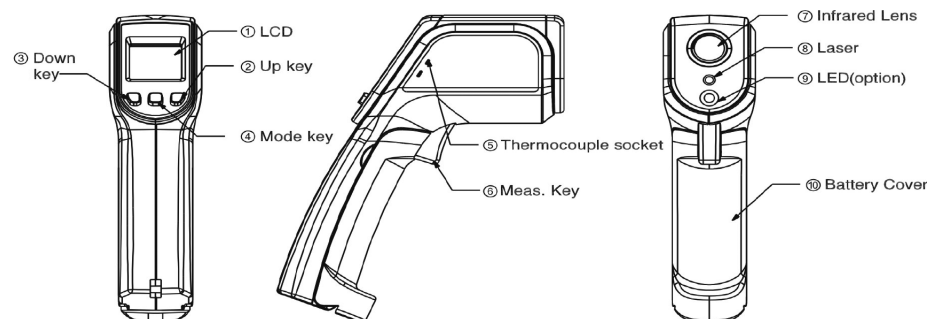

Simply aim the thermometer at the measure target with Lens (7) and press Meas. key (6) to display the surface temperature. The Distance: Spot is 16:1. Please make sure the target area is within the field of view.

(Default Screen)

FUNCTION

Press Mode key (4) for scrolling more display functions as follows.

	Here will show the emissivity data. (The default emissivity is 0.95.)
	Press Mode key (4), then press Up key (2) or Down key (3) to set the emissivity, then press Mode key (4) to confirm it. The emissivity can be changed from 0.10 (10E) to 1 (100E).
	Press Mode key (4) for the Maximum (MAX), Minimum (MIN), Difference between MAX and MIN (DIF) and Average (AVG) modes. During the measurement, the special modes reading will be displayed beside the mode icon.
	Press Up key (2) or Down key (3) to change the High Alarm (HAL) or Lo Alarm (LAL), then press Meas. key (6) to confirm it. For example: When the reading 26.9° C < LAL 27° C, the Low icon will flash and you will hear a beep sound.
	Connect the thermocouple with Thermocouple socket (5) and put the probe in/on the target, the thermometer will display the temperature automatically without pressing any button. To see the minimum or maximum data during the probe measurement, please hold down the Up key (2) or Down key (3).

** The thermometer will automatically shut off if left idle for more than 60 sec, unless in PRB mode. (In PRB mode, it will shut off if left idle for more than 12 minutes.)

ADD VALUE:

In E, MAX, MIN, DIF, AVG mode:	Press Up key (2) for LOCK mode ON/OFF. The lock mode is particularly useful for continuous monitoring of temperatures for up to 60 minutes.
	Press Down key (3) for ° C or ° F transferred.
In all modes: First hold on the Meas. key (6)	and press Up key (2) for backlight function ON/OFF.
	and press Down key (3) for laser function ON/OFF.



WARNING

Failure to observe the following warnings could create a risk of serious injury.

After measuring high temp, the probe may remain HOT for a while.



WARNING

Failure to observe the following warnings could create a risk of serious injury.

To avoid electric shock and thermometer damage, do not measure live circuit where voltage exceeds 24V AC RMS or 60V DC with the thermocouple probe.



CAUTION

Failure to observe the following cautions could create a risk of injury.

Do not stare into beam eye damage may occur.

Prolonged exposure can cause damage to the eyes including blindness. Use extreme caution when operating the laser. Never point the device toward anyone's eyes.

TIMKEN

Where You Turn

Storage & Cleaning. The thermometer should be stored at room temperature between -20 to +65° C (-4-149° F). The sensor lens is the most delicate part of the thermometer. The lens should be kept clean at all times. Care should be taken when cleaning the lens to use only a soft cloth or cotton swab with water or medical alcohol. Allow the lens to fully dry before using the thermometer. Do not submerge any part of the thermometer.

LCD ERROR MESSAGES. The thermometer incorporates visual diagnostic messages as follows:

	'Hi' or 'Lo' is displayed when the temperature being measured is outside of the settings of HAL and LAL.
	'Er2' is displayed when the thermometer is exposed to rapid changes in the ambient temperature. 'Er3' is displayed when the ambient temperature exceeds 0° C (32° F) or +50° C (122° F). The thermometer should be allowed plenty of time (minimum 30 minutes) to stabilize to the working/room temperature.
	For any other error messages (5-9), it is necessary to reset the thermometer. To reset it, turn the instrument off, remove the battery and wait for a minimum of one minute. Reinsert the battery and turn on. If the error message remains, please contact the Service Department for further assistance.
	'Hi' or 'Lo' is displayed when the temperature being measured is outside of the measurement range.

BATTERIES. The thermometer incorporates visual low battery indication as follows:

	'Battery OK': measurements are possible
	'Battery Low': battery needs to be replaced, measurements are still possible
	'Battery Exhausted': measurements are not possible

When the 'Low Battery' icon indicates the battery is low, the battery should be replaced immediately with AAA, 1.5V batteries. Please note: It is important to turn the instrument off before replacing the battery, otherwise the thermometer may malfunction. Dispose of used battery promptly.

SPECIFICATION

Item	Non-contact Infrared Scan function	Thermocouple Probe Scan function (K type; probe not included.)
Measurement Range	-60 to +625° C (-76 to +1157° F)	-64 to +1400° C (-83.2 to +1999° F)
Operating Range	0 to +50° C (32 to +122° F)	
Accuracy (Tobj = 15-35° C, Tamb = 25° C)	±1.0° C (1.8° F)	
Accuracy (Tamb = 23 ± 3° C)	Tobj = 0-625° C: +/-2% of reading or 2° C (4° F) whichever is greater, Tobj = -60-0° C: +/- (2° C + 0.05/degree)	+/-1% of reading or 1° C (1.8° F) whichever is greater (Test under Tamb = 23 ± 6° C)
Emissivity Range	0.95 default - adjustable 0.1 to 1 step .01	
Resolution (-9.9-199.9° C)	0.1° C/0.1° F	
Response Time (90%)	1 sec	
Distance: Spot	16:1 (90% energy covered)	
Battery Life	Typ.180, min. 140 hours continuous use (Alkaline, without Laser and Back Light.)	
Dimensions	46.0 x 143.0 x 184.8mm (1.81 x 5.63 x 7.28 inch)	
Weight	240 grams (8.5 oz) including batteries (AAA*2pcs)	

Note: Under the electromagnetic field of 3V/m from 200 to 600 MHz, the maximum error is 10° C (18° F).

EMC/RFI. Readings may be affected if the unit is operated within radio frequency electromagnetic field strength of approximately 3 volts per meter, but the performance of the instrument will not be permanently affected.

Note: The measure range is for thermometer only. User should choose proper probe types for different kinds of application. Please make sure the target to be measured will not exceed the temperature range of the probe to avoid permanent damage of the thermocouple probe.

Timken® is a registered trademark of The Timken Company.

© 2008 The Timken Company
1M 09-08-29